



EAN: 3276007906394  
MATRIX ID: 2023R09P02-0007



**SL** Navodila za uporabo **EN** Instructions Manual



Zahvaljujemo se vam za izbiro tega izdelka. Pri načrtovanju in izdelavi naših izdelkov si prizadevamo zagotoviti odlično kakovost, ki ustreza potrebam uporabnikov.

**POZOR! DA BI ZAGOTOVILI POPOLNO ZADOVOLJSTVO PRI NASTAVITVI, UPORABI IN NEGI TEGA IZDELKA, VAM PRIPOROČAMO, DA PRED UPORABO IZDELKA NATANČNO PREBERETE TA PRIROČNIK. UPOŠTEVAJTE OSNOVNA VARNOSTNA OPOZORILA, KI JIH VSEBUJE TA PRIROČNIK, IN GA SHRANITE ZA PRIHODNJO UPORABO.**

## 1. POMEMBNE INFORMACIJE



### POMEMBNO, SHRANITE ZA POZNEJŠO UPORABO: POZORNO PREBERITE

- Pred sestavljanjem in uporabo žara natančno preberite ta navodila.
- Ta navodila shranite za nadaljnjo uporabo.
- Samo za zunanjo uporabo. Naprave ne uporabljajte v zaprtih prostorih.
- Pred prižiganjem žara odstranite plastično embalažo z vseh delov.
- Žara ne uporabljajte v razdalji enega metra od vnetljive strukture ali površine. Ne uporabljajte pod vnetljivo površino.
- Ta naprava mora biti med uporabo odmaknjena od vnetljivih materialov.
- Pred prižiganjem žara odprite pokrov žara.
- Med uporabo naprave ne premikajte.
- Prižganega žara ne smete nikoli pustiti brez nadzora.
- Ročaj nape se lahko zelo segreje. Držite le sredino ročaja. Priporoča se uporaba rokavic za kuhanje.
- Uporabljajte pripomočke, ki so posebej zasnovani za žar in imajo dolge, na vročino odporne ročaje.
- Pazite na vročo paro, ki se lahko sprosti, ko odprete pokrov.
- Nekateri deli tega žara so zelo vroči. Bodite previdni v bližini otrok, starejših ljudi in hišnih ljubljencev.
- Nikoli ne pokrijte žara, dokler se popolnoma ne ohladi.
- Žar uporabljajte le na trdni in ravni površini.
- V bližini žara ne uporabljajte aerosolov.
- Kakršne koli spremembe tega žara so lahko nevarne, niso dovoljene in povzročijo izgubo garancije.
- Naprave ne spreminjajte. Uporabnik ne sme spreminjati delov, ki jih je zapečatil proizvajalec ali njegov zastopnik.
- Neupoštevanje navodil v tem priročniku lahko povzroči hude telesne poškodbe ali škodo.
- Če imate v zvezi s temi navodili kakršna koli vprašanja, se obrnite na lokalnega prodajalca.

**POZOR: DA BI SE IZOGNILI NEVARNOSTIM ZARADI NENAMERNE PONAŠTAVITVE TOPLOTNEGA IZKLOPA, TE ENOTE NE SMETE NAPAJATI PREK ZUNANJEGA STIKALA, KOT JE ČASOVNIK, ALI PRIKLJUČITI NA TOKOKROG, KI GA DOBAVITELJ ELEKTRIČNE ENERGIJE REDNO VKLAPLJA IN IZKLAPLJA.**

**NIKOLI NE PRIKLJUČUJTE ALI IZKLJUČUJTE ENOTE IZ ELEKTRIČNE VTIČNICE ZA NAPAVALNI KABEL Z MOKRIMI ROKAMI. PREDEN IZVLEČETE VTIČ IZ ELEKTRIČNEGA OMREŽJA, NAPRAVO VEDNO IZKLOPITE.**

**POZOR: TE NAPRAVE NE UPORABLJAJTE Z OGLJEM ALI PODOBNIM GORIVOM.**

## 2. NAMESTITEV

### Previdnostni ukrepi

- To napravo lahko uporabljajo otroci, stari najmanj 8 let, in osebe s fizičnimi, senzoričnimi ali duševnimi sposobnostmi ali pomanjkanjem izkušenj ali znanja, če so ustrezno nadzorovane ali če so dobile navodila o varni uporabi naprave in se zavedajo s tem povezanih tveganj. Otroci se s tem aparatom ne smejo igrati. Čiščenja in vzdrževanja ne smejo opravljati otroci brez nadzora uporabnika.
- Ne zapirajte zračnih odprtih na ohišju žara.
- Ne nalivajte vode neposredno na vročo površino ali grelni upor žara.
- Naprave ne uporabljajte v bližini vode v kadi, umivalniku ali drugih posodah.
- Žara ne izpostavljajte dežju, snegu ali drugim virom vlage.

### Izbira lokacije

- Ta žar je namenjen samo za zunanjo uporabo in mora biti postavljen na dobro prezračevanem prostoru. Pazite, da ga nikoli ne postavite pod vnetljivo površino. Stranice žara ne smejo biti bližje kot en meter od katere koli gorljive površine. Žar hranite stran od vnetljivih materialov!
- Skrbno izberite mesto, kjer boste uporabljali žar. Lokacija mora biti na odprtem, nevetrovnem območju, stran od dreves in drugih vnetljivih materialov.
- Žara nikoli ne postavljajte na nestabilno površino.

### Prižiganje žara

- Pred priključitvijo žara na električno omrežje se prepričajte, da so vsi upravljalni elementi žara v izklopljenem položaju.
- Napravo je treba napajati prek naprave na preostali tok (RCD) z nazivnim preostalim delovnim tokom, ki ne presega 30 mA.
- Napajalna napetost naprav, ki so priključene na električno omrežje, mora biti 230 V.

**POZOR:** Priporočljivo je, da napajalni kabel redno pregledujete, ali so na njem vidni znaki morebitnih poškodb, in če je kabel poškodovan, naprave ne smete uporabljati.

Če je napajalni kabel poškodovan, ga mora zamenjati proizvajalec, njegova služba za pomoč strankam ali podobno usposobljena oseba, da se izognete nevarnosti.

## 3. NAVODILA ZA UPORABO

### Opozorila

- Pred nadaljevanjem se prepričajte, da ste razumeli poglavje »pomembne informacije« v tem priročniku.
- Pred vsako uporabo preverite varnostne blokade in ali so vsi deli varno zaprti ali pritrjeni skupaj.
- Napajalnega kabla s krmilnikom nikoli ne potopite v vodo.

### Prva uporaba

- Po odstranitvi vsega embalažnega materiala in temeljitem umivanju pekača ali žara
- Vse dele temeljito posušite.
- Žar uporabljajte največ 3 do 5 minut brez živil. Ostanki iz proizvodnega procesa lahko povzročijo neprijeten vonj in dim, ko napravo prvič uporabite.

### Prižiganje žara

- Pred prižiganjem žara odprite pokrov žara. Nikoli ne prižigajte žara z zaprtim pokrovom.
- Prepričajte se, da so vsi gumbi izklopljeni (položaj 0 ali – ali minimum). Prepričajte se, da je vtič priključen na žar in da je vklopljen.
- Za prižig žara obrnite gumb na plus ali maksimum ali na 1, 2, 3, 4, 5.
- Stopnja segrevanja: najmanjša/srednja/najvišja.

### Pečenje na žaru

Grelec se segreva glede na stopnjo intenzivnosti in zahtevano vrsto kuhanja, zato se na njem spečejo živila. Naravni sokovi živil, ki nastanejo med pečenjem, se pretakajo po vročem

razpršilniku toplote (grelec) in izhlapevajo. Dim, ki nastane, obdaja živila in se sprošča navzgor ter daje hrani edinstven vonj po žaru. Za bolj enakomerno pečenje spustite pokrov žara in se prepričajte, da je moč najmanjša.

Pečenje na pekaču za žar

Grelec se segreva glede na stopnjo intenzivnosti in zahtevano vrsto kuhanja, zato se na njem spečejo živila. Na pekačih lahko pripravljate manjša živila, kot so morski sadeži, ki bi lahko padla med rešetke žara. V njih lahko pripravljate tudi živila, ki zahtevajo visoko temperaturo/kratek čas pečenja, kot so zelenjava in majhni kosi rib. Poleg tega jih lahko uporabljate kot kuhinjsko rešetko za peko zrezkov, jajc itd. Uporabljate jih lahko tudi za segrevanje loncev in ponev ali za ohranjanje toplote.

Obvladovanje izbruhov plamenov \*zelo pomembno\*

- Pri močnem brizganju maščobe lahko pride do nevarnosti nastanka plamena ali dima.
- Pred in med kuhanjem preverite stanje žara in grelnega telesa.
- V primeru vžiga maščobe upoštevajte spodnja navodila.
- Po vsaki uporabi izpraznite in očistite predal za maščobo vseh ostankov.

V primeru vžiga maščobe/opozorila:

- Poskrbite, da nobena oseba ne ostane v bližini žara, in počakajte, da plameni ugasnejo.
- Ne zapirajte pokrova ali pokrova žara.
- Žara nikoli ne poškopite z vodo. Če uporabljate gasilni aparat, mora biti to kemični gasilni aparat na suhi prah.
- Predala za maščobo ne odstranjujte.
- Če se zdi, da se ogenj ne umirja ali da se poslabšuje, se obrnite na gasilsko službo za pomoč.

Konec pečenja

- Žar vedno očistite po vsaki uporabi, da se na njem ne bi nabirala maščoba, ki bi se lahko vžgala.

Izklop žara

- Ko končate z uporabo žara, odklopite napajalni kabel
- Preden zaprete pokrov, počakajte, da se žar dovolj ohladi.

## 4. NEGA IN VZDRŽEVANJE

Žar redno čistite med uporabo in še posebej po daljšem skladiščenju.

Pred čiščenjem se prepričajte, da so žar in njegovi sestavni deli dovolj ohlajeni.

- Žara nikoli ne puščajte izpostavljenega vremenskim vplivom in ga zaščitite pred vlago.
- Žara nikoli ne poškopite z vodo, ko so njegove površine vroče.
- Nikoli ne ravnajte z vročimi deli, ne da bi si zaščitili roke.

Če želite podaljšati življenjsko dobo in ohraniti stanje žara, vam priporočamo, da ga pokrijete, če je dlje časa na prostem, zlasti v zimskih mesecih. V lokalnih trgovinah so na voljo visoko odporna prekrivala in drugi dodatki za žar.

Tudi če je žar pokrit, ga je treba redno pregledovati, saj se lahko pojavi vlaga ali kondenzat, ki ga lahko poškoduje. Morda bo treba žar in notranjost zaščitnega pokrova posušiti. Na nekaterih delih žara lahko začnejo gniti ostanki maščobe. Te je treba očistiti z zelo vročo milnico.

Če opazite zarjavele dele, ki niso v stiku s hrano, jih morate obdelati z odstranjevalcem rje in prebarvati s posebno toplotno odporno barvo za žare.

**Kuhalna površina**

- Ko se žar ohladi, ga očistite z vročo milnico. Za odstranjevanje ostankov hrane uporabite detergent za pomivanje posode. Ne uporabljajte abrazivnih gobic ali praškov za čiščenje, saj lahko trajno poškodujejo površino žara. Izperite in dobro posušite. Zaradi teže žara in pekačev ne priporočamo čiščenja v pomivalnem stroju.

- Opozarjamo vas, da se izogibajte uporabi ledenih kock, ki lahko povzročijo toplotni šok in razpokajo emajl na pekaču.
- Če se na kuhalni površini, ki je v stiku s hrano, pojavi rja, jo je treba zamenjati.

#### **Vzdrževanje grelnega elementa**

- Vaš grelni element je bil nastavljen tako, da zagotavlja največjo možno moč.
- Grelec zlahka očistite z mehko krpo, toplo vodo in tekočino za pomivanje posode.
- Napajalnega kabla s krmilnikom nikoli ne potopite v vodo.

#### **Razpršilnik toplote**

- Z lesenim ali mehkim plastičnim strgalom ali medeninasto krtačo odstranite vse ostanke hrane iz toplotnega difuzorja. Ne uporabljajte jeklenega strgala ali krtače. Čistite z vročo milnico in dobro sperite.

#### **Predal za maščobo**

- Po vsaki uporabi odstranite in očistite predal za maščobo vseh ostankov in maščobe z lesenim ali plastičnim strgalom, če je to potrebno.
- Če tega ne storite, lahko pride do vžiga maščobe. To lahko povzroči resne poškodbe žara, ki jih garancija ne krije. Po potrebi lahko predal očistite z milnico.

#### **Ohišje žara**

- Redno odstranjujte odvečno maščobo z ohišja žara s krpo, ki jo namočite v milnico in nato dobro ožamete. Odvečno maščobo in koščke hrane lahko odstranite iz notranjosti ohišja žara z lesenim strgalom ali strgalom iz mehke plastike.
- Če ga je treba popolnoma očistiti, uporabite krpo in toplo milnico ali najlonsko krtačo. Ne uporabljajte abrazivnih sredstev. Pred temeljitim čiščenjem odstranite rešetke in/ali pekače. Gumbov in priključkov žara ne potaplajte v vodo. Po previdni ponovni namestitvi sestavnih delov v ohišje žara preverite prižiganje naprave.

#### **Pokrov žara**

- Pokrov žara očistite z neabrazivno krpo ali blazinico in vročo milnico. Ne uporabljajte abrazivnih gobic ali praškov za čiščenje, saj lahko trajno poškodujejo površino žara. Po čiščenju žar skrbno posušite, da preprečite nastanek rje.

#### **Voziček**

- Obrišite ga s krpo, namočeno v vročo milnico, nato ga osušite.

#### **Pritrdilni elementi**

- Za boljšo stabilnost in varnost vijake in sornike zategnite približno dva tedna po montaži. Za dolgotrajno vzdrževanje izdelek zategnite vsaj enkrat na leto.

#### **Skladiščenje**

- Pred pokrivanjem ali shranjevanjem žara se prepričajte, da je ohlajen. Žar hranite v hladnem in suhem prostoru.
- Pred uporabo žara po daljšem skladiščenju upoštevajte postopke namestitve.

## **5. ZAŠČITIMO NAŠE OKOLJE**

Ne pozabite ga po koncu življenjske dobe odpeljati v obrat za obdelavo odpadkov, da ga bodo reciklirali. Če ima vaš žar motor ali ventilator, ga ne zavržite in ne sežigajte njegove dodatne opreme. Upoštevajte predpise o zbiranju in recikliranju tovrstnih izdelkov.

## 6. GARANCIJA

### Garancijski pogoji

Prodajna garancija začne veljati z dnem nakupa za določeno obdobje.

Ta garancija velja samo za uporabo v posameznem zasebnem gospodinjstvu in ne velja za komercialno, komunalno ali večstanovanjsko okolje, kot so restavracije, hoteli, letovišča in nepremičnine za najem.

Ta garancija pokriva vse napake v materialu in izdelavi: manjkajoče dele in komponente ter poškodbe, ki nastanejo pri običajni uporabi. Popravila in zamenjave delov ne podaljšajo prvotnega garancijskega obdobja.

V nobenem primeru v okviru tega prostovoljnega jamstva kakršno koli nadomestilo ne sme presegati nakupne cene prodanega izdelka.

Prevezmate tveganje in odgovornost za izgubo, škodo ali poškodbe vas in vaše lastnine in/ali drugih oseb in njihove lastnine, ki so posledica napačne uporabe ali zlorabe izdelka ali neupoštevanja navodil iz priloženih navodil za uporabo.

### Izključitve iz garancije

Garancija ne krije težav ali incidentov, ki so posledica nepravilne uporabe izdelka.

Garancija za izdelek je omejena na vrednost izdelka.

Izključeni so naslednji primeri:

- Običajna obraba (rja, deformacija, razbarvanje itd.) Deli, ki so neposredno izpostavljeni plamenom ali močni vročini. Normalno je, da je treba občasno zamenjati dele.
- Poškodbe zaradi nepravilnega vzdrževanja, nepravilnega skladiščenja, nepravilne montaže ali sprememb.
- Morebitna škoda zaradi nepravilne uporabe izdelka (komercialna uporaba, uporaba za sežiganje itd.).
- Posledice izpostavljenosti virom klora, npr. bazen, spa ali masažna kad.
- Škoda zaradi izrednih naravnih razmer, npr. toče, orkanov, potresov, cunamijev, električnih udarov, tornadov ali hudih neviht.

Če imate kakršnakoli vprašanja v zvezi z namestitvijo ali uporabo naprave, se obrnite na servisno službo v svoji trgovini.

## 7. TEHNIČNE SPECIFIKACIJE

**Št. modela:** EV2501-DP

**Napetost:** 220–240 V ~ 50/60 Hz

**Izhodna moč:** 1850–2200 W

**Stopnja zaščite:** IPX4

**Proizvajalec/servisier:** Adeo Services SAS

**Naslov:** 135, rue Sadi Carnot, CS 00001, 59790 RONCHIN, FRANCIJA



Električnih izdelkov ne smete odlagati skupaj z gospodinjstskimi odpadki. Odnesti jih je treba na komunalno zbirno mesto, kjer se odstranijo na okolju prijazen način v skladu z lokalnimi predpisi.

Za nasvete o recikliranju se obrnite na lokalne organe ali odlagališča odpadkov. Embalažni material je primeren za recikliranje. Embalažo odstranite na okolju prijazen način in jo oddajte službi za zbiranje materialov, ki jih lahko reciklira.



## INTRODUCTION

Thank you for choosing this product. In the design and manufacture of our products, we make every effort to ensure excellent quality that meets the needs of users.

**PLEASE NOTE! TO ENSURE THAT THIS PRODUCT PROVIDES YOU WITH COMPLETE SATISFACTION DURING INSTALLATION, OPERATION AND MAINTENANCE, WE RECOMMEND THAT YOU READ THIS MANUAL CAREFULLY BEFORE USING THE PRODUCT. PLEASE FOLLOW THE BASIC SAFETY WARNINGS CONTAINED IN THIS MANUAL AND KEEP IT FOR FUTURE REFERENCE.**

### 1. IMPORTANT INFORMATION



## IMPORTANT, PLEASE KEEP FOR FUTURE REFERENCE: READ CAREFULLY

- Please read these instructions carefully before assembling and using the barbecue.
- Keep these instructions for future use.
- For outdoor use only. Do not use this appliance indoors.
- Remove the plastic wrapping from all parts before lighting the barbecue.
- Be sure not to use the barbecue within one meter of any flammable structure or surface. Do not use under a flammable surface.
- This appliance must be kept away from flammable materials during use.
- Open the cover of your barbecue before lighting it.
- Do not move the appliance during use.
- This barbecue should never be left unattended when lit.
- The hood handle can get very hot. Grip only the centre of the handle. The use of a cooking glove is recommended.
- Use utensils specially designed for barbecues with long, heat-resistant handles.
- Be careful with hot steam that may be released when you open the hood.
- Some parts of this barbecue get very hot. Take care around children, elderly people and pets.
- Never cover the barbecue until it has cooled down completely.
- Use this barbecue only on a stable, flat surface.
- Do not use aerosols near the barbecue.
- Any modifications to this barbecue may be dangerous, are not permitted and will void the warranty.
- Do not modify this appliance. Parts sealed by the manufacturer or its agent must not be modified by the user.
- Failure to follow the instructions in this manual may result in serious injury or damage.
- If you have any questions regarding these instructions, please contact your local dealer.

**CAUTION: TO AVOID HAZARDS DUE TO INADVERTENT RESETTING OF THE THERMAL CUTOUT, THIS UNIT SHOULD NOT BE POWERED THROUGH AN EXTERNAL SWITCH, SUCH AS A TIMER, OR CONNECTED TO A CIRCUIT THAT IS REGULARLY TURNED ON AND OFF BY THE POWER SUPPLIER.**

**NEVER CONNECT OR DISCONNECT THE UNIT FROM THE ELECTRICAL OUTLET BY THE POWER CORD WITH WET HANDS. ALWAYS TURN OFF THE UNIT BEFORE REMOVING THE PLUG FROM THE POWER SUPPLY.**

**CAUTION: DO NOT USE THIS APPLIANCE WITH CHARCOAL OR SIMILAR FUEL.**

## 2. INSTALLATION

### Precautions

- This appliance may be used by children of at least 8 years of age and by persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge, if they are properly supervised or if they have been given instructions on the safe use of the appliance and are aware of the risks involved. Children must not play with this appliance. User cleaning and maintenance must not be carried out by unsupervised children.
- Do not block the air vents on the body of the barbecue.
- Do not pour water directly onto the hot area or the barbecue heating resistance.
- Do not use this appliance near water in bathtubs, sinks or other containers.
- Do not expose the barbecue to rain, snow or any other source of moisture.

### Selecting a Location

- This barbecue is for outdoor use only and should be placed in a well-ventilated area. Be careful never to place it under a combustible surface. The sides of the barbecue should never be closer than one meter to any combustible surface. Keep this barbecue away from flammable materials!
- Carefully select the location where the barbecue is to be used. The location should be in an open, non-windy area away from trees and other flammable materials.
- Never place your barbecue on an unstable surface.

### Powering the Barbecue

- Make sure that all barbecue controls are in the off position before connecting the barbecue to the power supply.
- The appliance should be supplied through a residual current device (RCD) with a residual operating current rating not exceeding 30 mA.
- The supply voltage of the devices connected to the mains must cover 230V.

**CAUTION:** It is recommended that the power cable be examined regularly for signs of possible damage, and the unit should not be used if the cable is damaged.

If the power cable is damaged, it must be replaced by the manufacturer, its customer service department or similarly qualified persons in order to avoid a hazard.

## 3. INSTRUCTIONS FOR USE

### Warnings

- Before proceeding, please make sure you understand the 'important information' section of this manual.
- Check the safety interlocks and that all parts are securely closed or fastened together before each use.
- Never immerse the power cord with the controller in water.

### First time use

- After removing all packing materials and thoroughly washing the baking sheet or grill
- Dry all parts thoroughly.
- Operate the barbecue for a maximum of 3 to 5 minutes without food. Residues from the manufacturing process may cause odours and smoke when the appliance is used for the first time.

### Lighting the barbecue

- Open the cover of your barbecue before lighting it. Never light your barbecue with the cover closed.
- Make sure that all buttons are turned off (position 0 or - or minimum). Make sure that the plug is connected to the barbecue and that the power is on.
- Turn the knob to the plus or maximum or to 1, 2, 3, 4, 5 to light the barbecue.
- Heat level: minimum/medium/maximum.



### Cooking on the grill

The resistance heats up according to the intensity level and the type of cooking required, which cooks the food placed on it. The natural juices of the food produced during cooking flow over the hot heat-diffuser (resistance) and evaporate. The resulting smoke envelops the food, escaping upward, giving the food a unique barbecue aroma. For more even cooking, lower the hood of the barbecue, making sure that the power is on minimum.

### Cooking on the barbecue sheet

The resistance heats up according to the intensity level and the type of cooking required, which cooks the food placed on it. The baking sheets allow you to cook smaller foods, such as seafood, that might fall between the bars of the grill. They can also be used to cook foods that require high temperature/short cooking time, such as vegetables and small pieces of fish. Also, they can be used exactly like a kitchen griddle, for grilling steaks, eggs, etc. You can also use them to heat pots and pans or to keep food hot.

### Controlling flashovers \*very important\*

- Following intense grease splashes, a risk of flames or smoke may arise.
- Check the condition of the grill and the heating element before and during cooking.
- In case of a grease fire, please follow the instructions below.
- Empty and clean the grease drawer of all cooking debris after each use.

### In the event of a grease fire/warning:

- Keep everyone away from the barbecue and wait for the fire to die down.
- Do not close the hood or lid of the barbecue.
- Never spray your barbecue with water. If you use a fire extinguisher, it must be dry chemical (powder).
- Do not remove the grease drawer.
- If the fire does not seem to be subsiding or seems to be getting worse, contact your fire department for assistance.

### End of the cooking session

- Always clean your barbecue after each use to avoid a build-up of cooking grease that could catch fire.

### Turning off the barbecue

- When you have finished using the barbecue, unplug the power cord
- Wait until the barbecue is sufficiently cold before closing the hood or the lid.

## 4. CARE AND MAINTENANCE

Clean your barbecue regularly between uses and especially after extended periods of storage.

Make sure the barbecue and its components are cool enough before cleaning.

- Never leave the barbecue exposed to the elements and keep it away from humidity.
- Never spray the barbecue with water when its surfaces are hot.
- Never handle hot parts without protecting your hands.

To extend the life cycle and maintain the condition of your barbecue, we strongly recommend that you cover it if it is left outdoors for extended periods of time, especially during the winter months. Heavy-duty covers and other barbecue accessories are available from your local dealer.

Even if your barbecue is covered for protection, it should be inspected regularly as moisture or condensation may form, which could damage it. It may be necessary to dry the barbecue and the inside of its protective cover. It is possible that grease residues may be mouldy on parts of the barbecue. This should be cleaned with very hot soapy water.

Any rusty parts you find that are not in contact with food should be treated with a rust remover and repainted with a barbecue or heat resistant paint.

### **Cooking Surfaces**

- When the barbecue has cooled, clean it with hot, soapy water. To remove food residue, use a dishwashing detergent. Do not use abrasive sponges or scouring powders as they may permanently damage the finish of your barbecue. Rinse and dry well. We do not recommend cleaning the grills and baking sheets in a dishwasher because of their weight.
- We remind you to avoid using ice cubes which may cause thermal shock and crack the enamel of the baking sheet.
- If rust appears on the cooking surface, in contact with food, it must be changed.

### **Maintenance of the heating element**

- Your heating element has been adjusted to provide maximum power performance.
- The heater resistance is easily cleaned with a soft cloth, warm water and dishwashing liquid.
- Never immerse the power cord with the controller in water.

### **Heat Diffuser**

- Remove any food residue from the heat diffuser with a wooden or soft plastic scraper or a brass brush. Do not use a steel scraper or brush. Clean with hot, soapy water and rinse well.

### **Grease drawer**

- After each use, remove and clean the grease drawer of all food and grease using a wooden or plastic scraper if necessary.
- Failure to do so may result in a grease fire. This could result in serious damage to your barbecue which will not be covered by the warranty. If necessary, the grease drawer can be cleaned with soapy water.

### **Barbecue body**

- Regularly remove excess grease from the body of the barbecue using a cloth dipped in soapy water and wrung out well. Excess grease and bits of food can be removed from the inside of the barbecue body with a wooden or soft plastic scraper.
- If you need to clean it completely, use a cloth and warm soapy water or a nylon brush. Do not use abrasives. Remove the grills and/or baking sheets before cleaning thoroughly. Do not immerse the barbecue's buttons and connectors in water. Check the lighting of the appliance after carefully reinstalling the components in the body of the barbecue.

### **Barbecue hood**

- Clean the grill cover with a non-abrasive cloth or pad and hot, soapy water. Do not use scouring pads or powders, as they may permanently damage the finish of your barbecue. Dry thoroughly after cleaning to prevent rust from forming.

### **Cart**

- Wipe with a cloth dipped in hot soapy water, then dry.

### **Fasteners**

- For better stability and safety, tighten the screws and bolts about two weeks after assembly. Tighten the product at least once a year for long-lasting maintenance.

### **Storage**

- Make sure your barbecue is cool before covering or storing it. Store your barbecue in a cool, dry place.
- Before using the barbecue after extended periods of storage, follow the installation procedures.

## 5. LET'S PROTECT OUR ENVIRONMENT

Please remember to take at the end of its life cycle to the waste treatment facility in order for it to be recycled. If your BBQ grill has a motor or a blower, do not throw it away, nor burn its accessories; please comply with applicable rules for collection, retrieval and recycling of such products.

## 6. WARRANTY

### Warranty conditions

The sales guarantee starts from the date of purchase for the defined period.

This guarantee applies only to use in a single private household and does not apply to commercial, communal or multi-family environment such as restaurants, hotels, shopping centres, etc.

restaurants, hotels, holiday centres and rental properties.

This warranty covers all defects in materials and workmanship: missing parts and components as well as damage occurring under normal use. Repairs and replacement parts do not extend the original warranty period.

Under no circumstances under this voluntary warranty shall any compensation of any kind exceed the purchase price of the product sold.

You assume the risk and responsibility for loss, damage or injury to you and your property and/or to others and their property resulting from misuse or abuse of the product or failure to follow the instructions provided by in the enclosed owner's manual.

### Warranty Exclusions

The warranty does not cover problems or incidents resulting from improper use of the product.

The product warranty is limited to the value of the product.

The following cases are specifically excluded:

- Normal wear and tear (rust, deformation, discoloration...) Parts exposed directly to flames or intense heat. It is normal to have to replace parts over time.
- Damage resulting from improper maintenance, incorrect storage, incorrect assembly or the introduction of modifications.
- Any damage resulting from incorrect use of the product (commercial use, use as an Incinerator...).
- Consequences of exposure to chlorine sources, e.g. swimming pool, spa or hot tub.
- Damage due to extreme natural conditions, e.g. hail, hurricanes earthquakes, tsunamis, power surges, tornadoes or severe thunderstorms.

If you have any questions regarding the installation or use of your device, please contact the service department of your shop.

## 7. TECHNICAL SPECIFICATIONS

**Model No.:** EV2501-DP

**Voltage:** 220-240V~ 50/60Hz

**Output:** 1850-2200W

**IP Class:** IPX4

**Manufacturer/Service:** Adeo Services SAS

**Address:** 135, rue Sadi Carnot, CS 00001, 59790 RONCHIN, FRANCE



Electrical products must not be thrown out with domestic waste.

They must be taken to a communal collecting point for environmentally friendly disposal in accordance with local regulations.

Contact your local authorities or stockiest for advice on recycling.

The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.

**SL** Ta izdelek je mogoče reciklirati. Če ga ne morete več uporabljati, ga prenesite v center za reciklažo odpadkov.

**EN** This product is recyclable. If it cannot be used anymore, please take it to waste recycling centre.



Izdelano na Kitajskem / Made in China

Datum izdelave :

Production date :

MM / YYYY

SERIAL NUMBER

\*\* 5 let garancije / 5-year warranty

**EU : ADEO SERVICES**

135, rue Sadi Carnot – CS 00001 59790 – RONCHIN – Francija

**EU : ADEO SERVICES**

135, rue Sadi Carnot- CS 00001 59790- RONCHIN- France

**Made in China**